Kanso® Sound Processor

Quick Guide





CP950



About


Your Cochlear™ Kanso® Sound Processor (model number: CP950) works with your Cochlear implant to transfer sound to your ear.



NOTE

More information and warnings in the Kanso Sound Processor User Guide.

Sound Processor

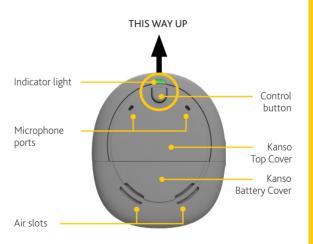

Lock and unlock battery cover

To lock, turn the screw clockwise until it is horizontal.





LOCKED

To unlock, turn anticlockwise until it is vertical.




3

Change batteries



 Turn the lock screw anticlockwise to unlock the battery cover (clockwise to lock).

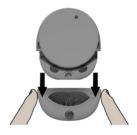

 Slide to open.
Use your fingers on the sides to pull off the cover




 Insert two new p675 high power zinc air disposable batteries, flat side facing up.



 Replace battery cover.
Turn lock screw clockwise to lock.

Attach your processor

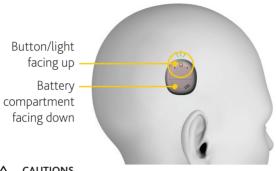



CAUTIONS

- Take care to position your sound processor correctly. This is important to get the best performance, and so it does not fall off your implant.
- · If you have two implants, you must use the correct sound processor for each implant.

Attach a SoftWear pad

If you experience discomfort, attach an adhesive Cochlear SoftWear[™] pad to back of processor.



Secure your processor

You can attach a Nucleus® Safety Line to reduce the risk of losing your processor.




Pinch the loop, and pass it through an attachment hole from front to back, pass the clip through the loop, and pull tight.

Turn on and off

Press button to

To turn **off**, press and hold button until the light is a steady orange.

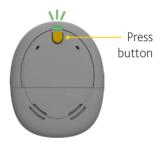




NOTE

Sound processor turns off automatically when it has been off your implant for two minutes.

Change program

Press button to change program.

Number of beeps or green flashes (if set up by your clinician) indicates the program number.

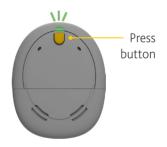

Stream audio

Press and hold button (2 seconds) to stream audio sources.

Press and release again to cycle to next audio source.

Blue: streaming audio.

Tap button to stop streaming.

Each time you press the sound processor button, you cycle through the available audio sources in order:

| PRESS | TELECOIL ENABLED | NO TELECOIL |
|--------------|----------------------|----------------------|
| 1 | Telecoil | Wireless accessory 1 |
| 2 | Wireless accessory 1 | Wireless accessory 2 |
| 3 | Wireless accessory 2 | Wireless accessory 3 |
| 4 | Telecoil | Wireless accessory 1 |

Lights

Everyday use

| LIGHT | WHAT IT MEANS |
|-------|--|
| ••••• | Processor flashes while receiving sound from microphones (Child mode only). |
| • | Turning on and changing programs. Number of flashes indicates the number of the current program. |
| ••••• | Processor flashes while receiving sound from audio source (Child mode only). |
| | Turning off processor. |

Alerts

| LIGHT | WHAT IT MEANS |
|-------|---|
| • • • | Processor is off your head (or connected to the wrong implant). |
| •••• | Processor batteries are low. Change batteries. |
| | Fault. Contact your clinician. Stays on until the issue is resolved. |

Hear now. And always

Cochlear Ltd (ABN 96 002 618 073)

1 University Avenue, Macquarie University, NSW 2109, Australia Tel: +61 2 9428 6555 Fax: +61 2 9428 6352

Cochlear Ltd (ABN 96 002 618 073)

14 Mars Road, Lane Cove, NSW 2066, Australia Tel: +61 2 9428 6555 Fax: +61 2 9428 6352

ECREP Cochlear Deutschland GmbH & Co. KG

Karl-Wiechert-Allee 76A, 30625 Hannover, Germany Tel: +49 511 542 770 Fax: +49 511 542 7770

Cochlear Americas

13059 E Peakview Avenue, Centennial, CO 80111, USA Tel: +1 303 790 9010 Fax: +1 303 792 9025

株式会社日本コクレア (Nihon Cochlear Co Ltd)

〒113-0033 東京都文京区本郷2-3-7 お茶の水元町ビル Tel: +81 3 3817 0241 Fax: +81 3 3817 0245

www.cochlear.com

Cochlear, Hear now. And always, Nucleus, and the elliptical logo are either trademarks or registered trademarks of Cochlear Limited. © Cochlear Limited 2017